



FULL VERSION MANUAL GLOW RECHARGE



Glow Recharge Black
Art.no 38506



Glow Recharge Blue
Art.no 38507



Glow Recharge Yellow
Art.no 38508

PRODUCT OVERVIEW

The packaging contains the following parts:

 
- Lantern
- Integrated battery 2050 mAh
- Charging cable not included
- Quick Guide

BEFORE USE

CHARGE THE INTEGRATED BATTERY

The battery needs to be charged before first use.

1. Connect a USB-C charging cable to the charging port of the lantern. The charging port is water resistant, but make sure there is no debris inside the port when inserting the charging cable.



2. Connect the other end of the charging cable to a USB-port (either from a power bank or a USB charger/adaptor connected to a wall outlet).
3. On the side of the lantern, there are 4 LEDs showing battery status during charging:
 - Green light constant (all 4 LEDs) = battery is fully charged
 - Red or green light blinking = battery is charging

Approximated charge time (depending on input source): 2 h

Note! When the battery is fully charged the charger automatically switches to maintenance mode.
Note! Never leave a lantern unattended during charging.

BUTTON LOCK

On the side of the lantern there is a power button [⏻]. This button can be locked to prevent the lantern from being lit by accident.

To activate the button lock: make sure the lantern is turned OFF, press the [⏻] button with an extra long press (3 sec). The LED next to the [3s 🔒] symbol will start flashing red. When the red LED stops flashing and lights constant - the button is locked.

If you try to start lantern with button lock activated the red LED will flash to indicate that the lantern is locked.

To deactivate the button lock: press the [⏻] button with an extra long press (3 sec). The red LED will start flashing. After 3 seconds, when the button lock is deactivated, the LED next to the [3s 🔒] symbol will turn steady green. Now you can start the lantern as normal.

- Always make sure to activate the button lock when the lantern is stored in a closed compartment such as in a bag, pocket or similar.

DURING USE

CONTROLLING THE LIGHT MODES

The push buttons on the side of the lantern controls all light modes. First, make sure that the button lock (see above) is deactivated.

4 BRIGHTNESS LEVELS:

Each press on the power button [⏻] gives you the following light:

1. Turns the lantern ON at MIN LOW level
2. Switches to MIN HIGH level
3. Switches to MED level
4. Switches to MAX level
5. Starts over from 1

To turn OFF the lantern; press and hold the button for 1 second.

2 LIGHT COLOURS

Glow has two light modes: cool white and warm white, for different situations. The cool white light is an efficient work light when setting up camp, cooking, or organizing, while the warm white light creates a cosy campfire glow for relaxing, socialising, or reading.

Each press on the [MODE] button toggles between the cool and warm light mode.


BACKLIT BUTTONS

To make the lantern easier to operate in the dark, the push buttons light up when pushed. The buttons stay lit as long as the lantern is switched on. The buttons stay lit for 30 seconds after the lantern is switched off.



PLACEMENT

The fold-out metal hooks lets the lantern be placed on even or uneven surfaces. Use one hook to tilt it for optimal angle of the light, or both hooks to hang it.

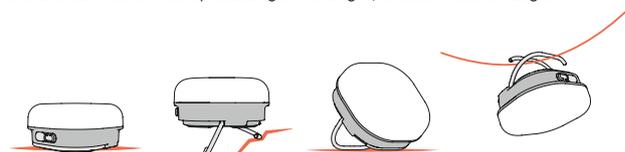

BATTERY STATUS INDICATION

When the lantern is switched OFF - the LED indicators on the side will show the current battery status for 5 seconds.

The LED indicators indicates the following:

- 4 green LEDs = Fully charged
- 3 green LEDs = 50-75% of the battery remains
- 2 green LEDs = 25-50% of the battery remains
- 1 red LED = 10-25% of the battery remains

LOW BATTERY WARNING

When less than 10% of the battery remains, the red LED will be lit constantly, whether the lantern is switched on or not.


AFTER USE

MAINTENANCE

To make sure you get maximum performance from your lantern, clean it regularly with a damp cloth. Open battery compartment and wipe dry if lantern has been exposed to heavy rain or accidentally submerged.

TECHNICAL SPECIFICATIONS RECHARGE

Lumen / Burn time:	See matrix below
Weight:	91 g (3.2 oz)
Battery type:	Li-Ion 2050 mAh, integrated
Charging time:	2 h
Water resistance:	IPX5
Operative temperature range:	-30 - (+)50°C
Storage temperature range:	-40 - (+)60°C

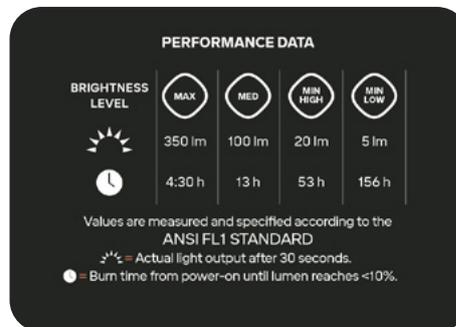

PROTECTING THE ENVIRONMENT.

Lantern, batteries and packaging are recyclable. Please dispose these items at designated recycling stations.

WARRANTY

Silva warrants that, for a period of two (2) years, your Silva Product will be substantially free of defects in materials and workmanship under normal use. Silva's liability under this warranty is limited to repairing or replacing the product. This limited warranty extends only to the original purchaser.

If the Product proves defective during the Warranty Period, please contact the original place of purchase. Make sure to have your proof of purchase on hand when returning the product. Returns cannot be processed without the original proof of purchase. This warranty does not apply if the Product has been altered, not been installed, operated, repaired, or maintained in accordance with instructions supplied by Silva, or has been subjected to abnormal physical or electrical stress, misuse, negligence or accident. Neither does the warranty cover normal wear and tear. Silva is not responsible for any consequences, direct or indirect, or damage resultant from use of this product. In no event, will Silva's liability exceed the amount paid by you for the product. Some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. This Warranty is valid and may be processed only in the country of purchase.

For more information please visit www.silvaweden.com